

Gaming Keyboard AB-KB-K04

Important Safety Instructions



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

DANGER

Keep any packaging materials away from children and pets -these materials are a potential source of danger, e.g. suffocation!

- ▶ Protect the product from extreme temperatures, hot surfaces, open flames, direct sunlight, water, high humidity, moisture, strong jolts, flammable gases, vapors and solvents.
- ▶ Do not insert any foreign objects inside the casing.
- ▶ Do not bend or kink the cable.
- ▶ This product is intended to be used in dry areas only.


Package Content

- Wired Gaming Keyboard
- Hand support
- Key puller
- User Manual

Explanation of Symbols

- Direct current (DC)
- USB plug


Product Diagram

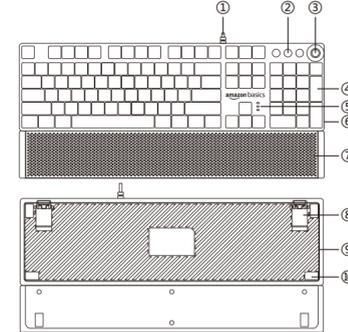


- 1. USB Cable
- 2. Mode key
- 3. Light effect / volume knob
- 4. Two color key cap
- 5. Indicator light
- 6. Metal panel
- 7. Magnetic suction hand support
- 8. Bracket
- 9. Bottom cover
- 10. Foot pad

Keyboard Usage

- 1. Connect the USB plugs of the keyboard to the compatible USB ports of the computer (Fig. 1).

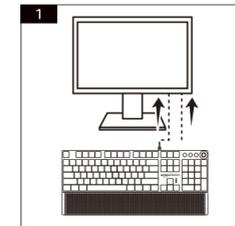

- 2. Unfold the feet for a clearer visibility of the keys (Fig. 2).

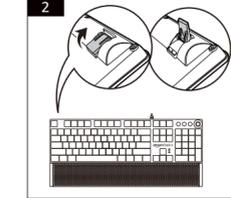

Product Features

 


- ▶ The knob is designed in dual-mode mode, lighting mode and multimedia mode. Default mode is lighting mode.
- ▶ Switch mode: Press and hold for 3 seconds to switch the mode.
- ▶ Multimedia mode: The knob light is off;
- ▶ Lighting mode: The knob light is on.



amazon.in/basics

V01-04/24



FN+ESC
Restore the factory default value in 1~2 seconds

Multimedia Mode

Button	Action	Function
	Press once	Mute
	Rotate knob up	Decrease volume
	Rotate knob down	Increase volume
	Press once	Previous Song
	Press once	Play / Pause
	Press once	Next Song

Lighting Mode

Button	Action	Function
	Press once	Switch light effect
	Rotate knob up	Decrease brightness
	Rotate knob down	Increase brightness
	Press once	Light mode 1 (Default "1, 2@, 3#, 4\$, 5%, Tab, Ctrl, Shift, Alt, Q, W, E, T, A, S, D, F, Z, C, V, B, M" will light up)
	Press once	Light mode 2 (Default "1, 2@, 3#, 4\$, 5%, 6^, Esc, Space, Tab, Q,W,E, R, Y, A, S, D, F, G, H, C, B, M" will light up)

	Press once	Light mode 3 (Default "1, 2@, 3#, 4\$, Esc, F1, Tab, Shift, Ctrl, Space, Enter, Insert, Home, Page up, Delete, End, Q, W, E, R, A, S, D" will light up)
--	------------	---------------------------------------------------------------------------------------------------------------------------------------------------------

NOTE:

- ▶ You can make your own light according to your preference. After long pressing the "M1/M2/M3" key for 3 seconds, the knob indicator will flash. You can input the any key which you want to light up on the keyboard. After recording, press "M1/M2/M3" key to confirm.
- ▶ The default key of the product is 6 keys without impact. Press "FN+SCR" to switch to full key without impact.

Product Parameters

Model NO.	AB-KB-K04
Rated Voltage	5V == 250mA
Key Lifetime	50 million times

OS Compatibility	Vista/Windows 7, 8, 10/Mac
Keyboard Dimensions	Approx. 435 x 125 x 34 mm
Hand Support Dimensions	Approx. 436 x 68 x 13 mm
Keyboard Net Weight	Approx. 788 g
Hand Support Net Weight	Approx. 139g

E-Waste Disposal



Be a Responsible User. Recycle or refurbish your old Amazon brand products to help protect the environment.

The crossed-out bin symbol on this product or its packaging signifies that this product should be discarded separately from ordinary household waste at its end of life. Be aware that it is your responsibility to dispose-off e-waste in such a manner that no damage to human health and environment occur.

E-waste is generated from electronic and electrical appliances/components which have reached their end-of-life period or are no longer fit for their original intended use and are destined for recovery, recycling or disposal. E-waste when

disposed or recycled improperly, can cause severe environmental pollution and adversely affect the human body as they contain toxic chemicals. Please ensure that the electronic products that are unwanted, not working, and nearing or at the end-of-life are disposed-off only through authorized recycling or refurbishing points. Please contact your municipal waste management authority or your household waste disposal service for additional details.

This product and the components thereof conform to the provisions of hazardous substances specified under Rule 16 (1) and Rule 16(4) of E-waste (Management) Rules, 2022 [Chapter VII titled the Reduction in the Use of Hazardous Substances in the manufacture of electrical and electronic equipment and their components or consumables or parts or spares].

WARRANTY AND SERVICE

1. We grant 1 year warranty on the product commencing from the date of purchase against defects in manufacturing, materials, and assembly.
2. Within the warranty period, we will correct any defects in materials or workmanship, either by repairing or replacing the complete appliance, as we may choose, free of charge. This warranty is valid to the original purchaser only.

3. For customer service related queries, please contact us: 1800-419-2373 (available Monday to Saturday from 9.30 am to 6:00 pm except national Holidays). For warranty detail, please visit the product page or call Customer service number.

THIS WARRANTY EXCLUDE, OR DOES NOT APPLY OR BECOME VOID IF:

1. Damage is caused by improper use, abuse or excessive use outside the intended purpose.
2. Normal wear or use as well as defects that have a negligible effects on the value or operation of the appliance.
3. Repairs or product modifications have been carried out by unauthorized organization or persons and if original Amazon Basics parts are not used.
4. Consequential damages (including but not limited to loss of data or loss of income), nor compensation for activities done by yourself.
5. The proof-of-purchase has been altered in any way or is made illegible.
6. The model number, serial number or production date code on the product has been altered, removed or made illegible.
7. The defect is caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.